


How To Install FLEX LOCATORS (Blind)


Feature

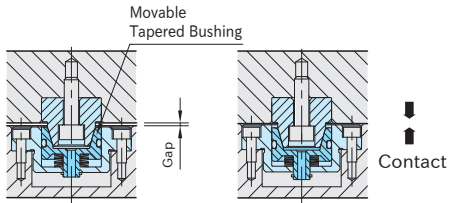

- Fixture plate is lifted down, and tapered pin engages with tapered bushing.
- Movable tapered bushing goes down, and fixture plate contacts with base plate.

How To Install

Bushings on Base Plate

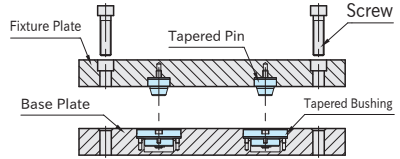

Pins on Base Plate

