
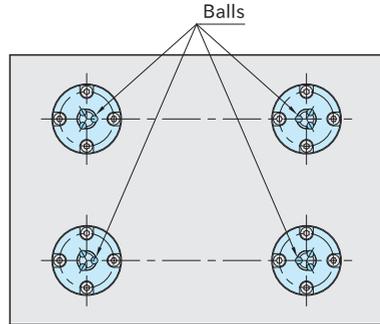


How To Use PNEUMATIC FLEX LOCATORS


How to Use

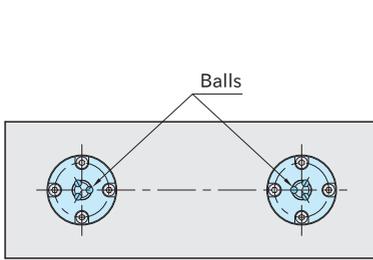

The pins should be mounted in the direction shown in the above figures.


How to Remove (Direct Style Pins)

For easier removal, insert screws into the tapped holes and screw them.

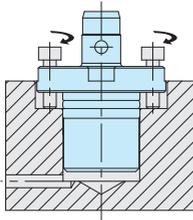

How to Remove (Bushings)

For easier removal, insert screws into the tapped holes and screw them.

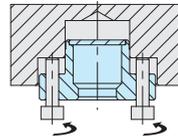

Note

Size	Max. Loading Capacity (N)
AMWF18	400
AMWF26	560

- If the total load exceeds the maximum loading capacity, the locating repeatability may exceed $\pm 10 \mu\text{m}$.
- In vertical use, the locating repeatability may exceed $\pm 10 \mu\text{m}$.
- Pins and Bushings should be positioned equally against the center of the fixture plate.
- For Port Style Pins, use with air joint that is available commercially.

Note: The maximum load is the entire sum of the load of fixture plates, fixtures and workpieces.

Note: The maximum loading capacity shown is the value when two sets each of **AMWF-L-S** Pins and **AMWF-BU** Bushings are used.