

Part Number	S	LB	Weight (kg)	Delivery Time
MAG5040DW-100	100	356	2.9	10 Working Days
MAG5040DW-150	150	456	3.3	


Note

The gearbox will be delivered with mounted to Mechanical Linear Actuators in the orientation as in the figure below.

Reference

- How To Change Gearbox Position
- Dimensions of Gearbox
- Technical Information of Mechanical Linear Actuators

How To Use

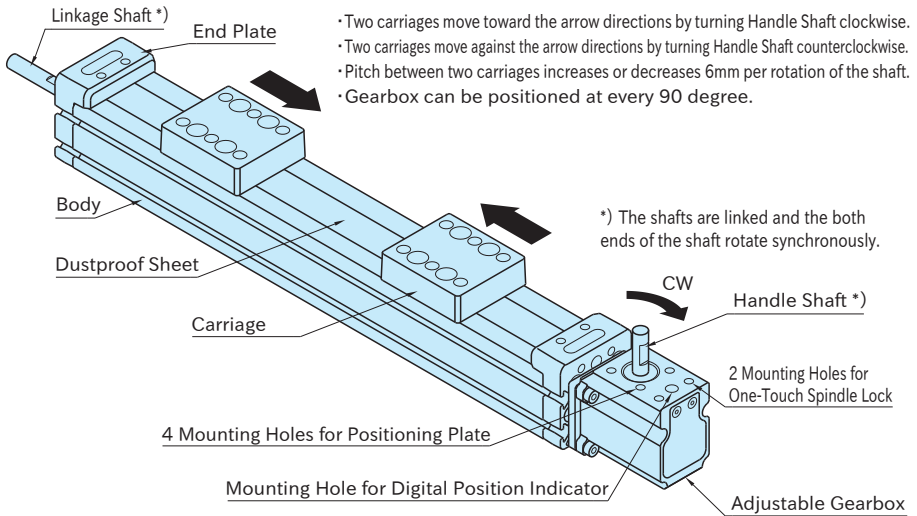

- Two carriages move toward the arrow directions by turning Handle Shaft clockwise.
- Two carriages move against the arrow directions by turning Handle Shaft counterclockwise.
- Pitch between two carriages increases or decreases 6mm per rotation of the shaft.
- Gearbox can be positioned at every 90 degree.

Related Product

Choose the optional elements for your needs.

• For actuators with customized stroke, see

[MAGX5040DW](#).

- One-Touch Spindle Locks
- Positioning Plate
- Digital Position Indicators
- Adapter Shafts
- Handwheels
- Pair of Stops
- T-Nuts
- Groove Cover