


# BJ214

# SCREW STOP BUTTONS

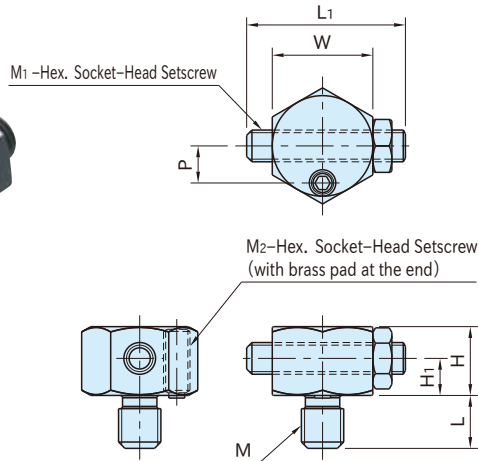

Body
Steel (S45C)
Quenched and tempered
Black oxide finish

Part Number	M <sub>1</sub>	L <sub>1</sub>	H <sub>1</sub>	H	W	M	L	M <sub>2</sub>	P	Weight (g)
<b>BJ214-08001</b>	M 6×1	30	7	13	19	M 8×1.25	10	M5×0.8-12L	7	40
<b>BJ214-10001</b>	M 8×1.25	40	8.5	16.5	22	M10×1.5	12		8	75
<b>BJ214-12001</b>	M10×1.5	50	11	21	24	M12×1.75	15	M6×1 -20L	9	120
<b>BJ214-16001</b>	M12×1.75	60	12	23	30	M16×2	20		12	210

## How To Use

Hex. Socket-Head Setscrew (with brass pad at the end)

\*) Minimize this clearance when installing.

**Installation Information**

1. Screw in the body completely.
2. Screw back the body and set the adjustment screw.
3. Tighten up the hex. socket-head setscrew to lock the body.

## How To Use

Use to stop a low-profile workpiece.