


CP720-N

FLEX LOCATING PINS

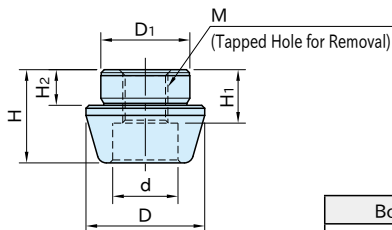


★ **Key Point** —
Easier mounting hole preparation

Body
SCM440 steel
Nitrocarburized

Part Number	D_1 ($0_{-0.02}$)	H_2	D	H	M	H_1	d	Weight (g)	Locating Receivers
CP720-10032N	10	4.5	13	10	M 5×0.8 (Prepared Hole ϕ 4.2)	6	8	5	CP725-16032
CP720-15050N	15	6	20	15.7	M 8×1.25 (Prepared Hole ϕ 6.8)	9	11	20	CP725-25050
CP720-20070N	20	8	30	22.1	M10×1.5 (Prepared Hole ϕ 8.5)	13	14	66	CP725-38070
CP720-30095N	30	10	45	31	M16×2 (Prepared Hole ϕ 14)	17	20	211	CP725-56095


How To Use

■ Mounting Hole Dimension

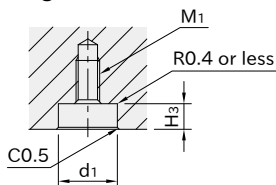


Part Number	d_1 (H7)	H_3	M_1
CP720-10032N	10	5	M 4×0.7
CP720-15050N	15	6.5	M 6×1
CP720-20070N	20	8.5	M 8×1.25
CP720-30095N	30	10.5	M12×1.75


■ Spacing Tolerance

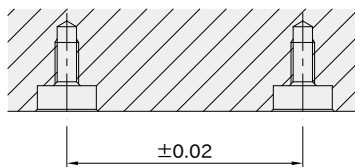

■ Installation and Removal

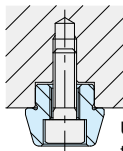

Use a socket-head cap screw to fix the Flex Locating Pin.

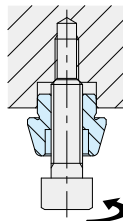

For removal, insert a screw into the tapped hole and screw it.

Reference

- How To Install FLEX LOCATORS (Blind)
- How To Use FLEX LOCATORS (Blind)